




## AM/DH Cranks and Chainring Installation Guide.




1. To mount either our standard tooth or narrow wide chainring, please be sure to mount the chainring with the logo side towards the BB.
2. When looking at the back, logo'd side of the chainring, there is a relief cut in the ring that matches the crank. This will allow the chainring retention bolts to sit countersunk and flush on both mounting surfaces and allow proper retention between the chainring and crank.

### **Correct installation:**

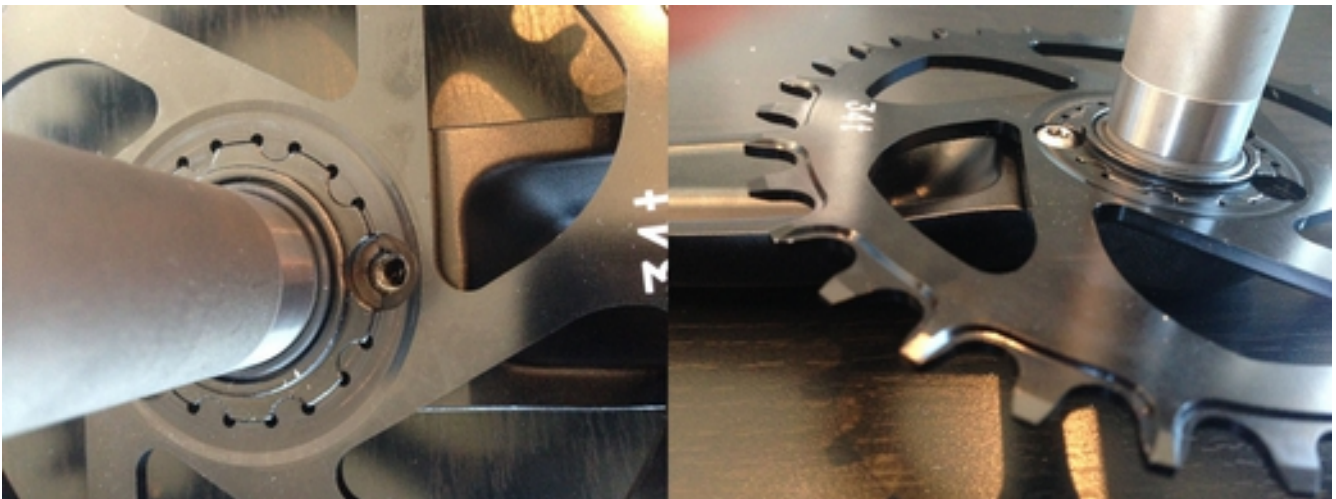

3. Mounting the chainring backwards with the logo side out will not allow the bolt to sit at its proper, countersunk, height and may cause damage to the chainring and BB when installed.

**Incorrect installation:**

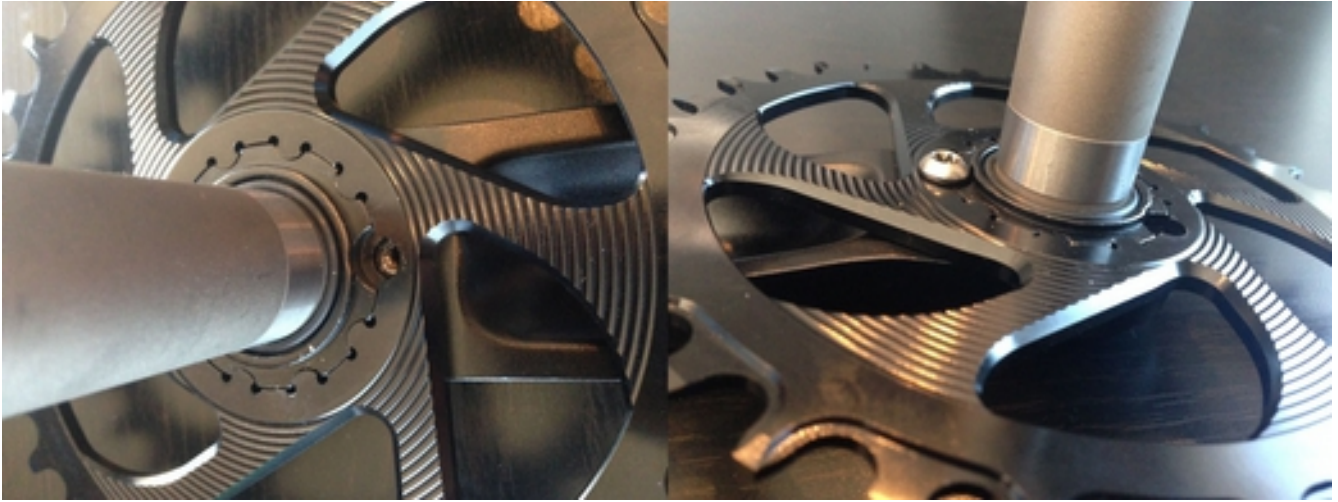

If you have any questions about your installation, call us with any questions. 801-548-2556

\*Please note - Canfield Brothers can not be responsible for damage to products due to improper installation.